


VIKING

STAGE LIGHTING

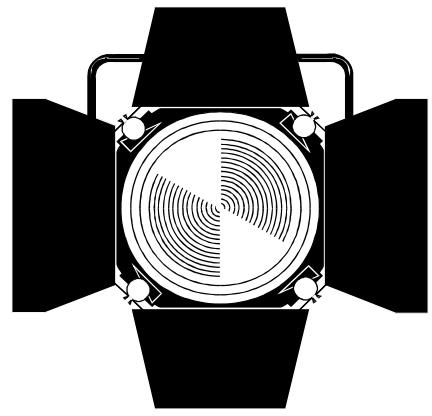

ICE 100 Heavy Fog Machine

- Fill Smoke fluid bottle with separate containers fluid
- Unscrew hopper lid and remove remote and drainage bottle
- Fill hopper with ice and screw down lid
- Plug in remote into the bottom 4 pin XLR
- Ensure Water Pump switch is set to off
- Plug in mains lead and turn on a red light will light on the remote
- Wait about 5 minutes for the smoke machine to heat up (smoke will appear out of the rear fan vent
THIS IS NORMAL!)
- When the machine is ready the green light on the remote will light
- To use in short bursts set the output control to desired level and press the manual button
- To use in continuous mode set the output level to half or less and press the continuous button on the remote – to stop press button again. (You can put the output above half but the smoke fluid will cool the heater block down and cause the machine to cut out and reheat – the machine will return to normal once the cycle has finished)
- You can set the machine to automatically produce smoke at desired intervals and durations to use this function you have to depress the timer on/off button
- When finished unplug the remote by pressing in the button on the XLR connector
- Unscrew the hopper lid and remove any ice which is left
- Push the drainage pipe into the red push fit connector marked Water Out, ensure the other end is in the drainage bottle
- Press the water pump switch to manual (a loud noise from the pump is normal until water is fed through the pump – to remove all the water from the hopper tip the machine to the front and to the right, when all the water has been removed turn off all the pump)
- Remove the pipe by PUSHING IN THE RED RING!
- Empty drainage bottle e.g. into sink
- Unplug mains lead and wait for machine to cool
- Put drainage bottle and remote in hopper
- Remove smoke fluid bottle and transfer unused contents into transit bottle.

Please pack as delivered for a safe transit

