


VIKING ***STAGE LIGHTING***

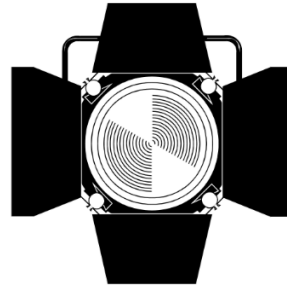

VK WDMX 512

The Function button is used for pairing TX to RX

Steady orange light on Function Button on TX or/and RX = DMX is present on input XLR to TX

Flashing briefly indicates no dmx is present.

If both RX and TX have orange light on steady and not flashing the units are paired together already and are ready to use.

If orange flashing quickly on RX then it is not paired to the TX

To Pair:

ON RX press and hold the function button for 5 seconds until the orange lighting goes out and let go of the button.

On TX press the Function button and the orange light will flash quickly for 5 seconds on both the TX and RX as the units search for a unused frequency and then pair each other together. At this time the orange will become steady (assuming dmx is present) on both RX and TX

To add another receiver or pair to multiple receivers press the function button on the RXs to be paired for 5 seconds whilst any that are already paired are left on the orange goes out on new one(s) to be paired and then press function button on TX to pair to that TX, they (TX & new RX plus old RX's already paired) will flash for 5 secs and then be paired

To Change a transmitter from TX to RX or back:

Hold the Function Button Down whilst plugging in and turning power on. If it has set the unit to TX the orange led will light up, if no light is on on the unit then it is set to RX. Repeat the process to revert the status to the opposite way round.